



VIISAN VisualCam

USER MANUAL

Windows Edition V1.0

COPYRIGHT © BEIJING VIISAN TECHNOLOGY CO., LTD. ALL RIGHTS RESERVED. WWW.VIISAN.COM

Index

Copyright	2
Trademarks	2
Disclaimer	2
Introduction	3
System Requirements	4
Installing the software	5
Uninstalling VIISAN VisualCam	6
Getting Started	7
Operation Interface Description	10
1. Function Tabs	10
2. Select Connection	11
3. Left Toolbar	11
4. Image Adjustment Menu	13
5. Capture Button Settings	14
6. Thumbnail List	14
7. File Save Path Settings	15
8. Settings menu	15
Visualizer Mode Description	18
Image Adjustment Menu	20
Select Capture Mode	21
Split-Screen Mode Description	24
The action buttons of split-screen mode	24
Compare with two live screens	25
Compare images	26
Change the display layout	27
Whiteboard Mode Description	28
Whiteboard Toolbar Description	28
Add a whiteboard page	31
Troubleshooting	32

Copyright

All rights reserved by Beijing VIISAN Technology Co., Ltd. No part of the materials shall be reproduced in any form or by any means without prior written permission.

Trademarks

- The VisualCam™ is a trademark of Beijing VIISAN Technology Co., Ltd. registered in the U.S. and other countries.
- Windows® is a registered trademark of Microsoft Corporation in the United States and other countries. All other products mentioned in this document are trademarks or registered trademarks of their respective owners.

Disclaimer

- The screenshots in this user's manual were made with Windows 10. If you are using other Windows system, your screen will look somewhat different but still function the same.
- Specifications of this software and contents of this user manual are subject to change without notice. Any modification, error correction, or feature updates made in the actual software may have not been timely updated in this user manual. User may refer to the actual software itself for more accurate detail. Any misprints, translation errors, or inconsistencies with existing software, will be updated as soon as possible.

Introduction

VIISAN VisualCam is a multi-functional education visualizer software specially designed for VIISAN's visualizers, it provides a full-screen window and various annotation functions that allows you directly add annotations on the live window by using the free-hand drawing tools, enable the mask or spotlight modes, zoom, and rotate the image, freeze the live video, change the resolution, and adjust brightness. With this powerful visualizer software, you can easily present or pre-record any teaching materials in various ways, like taking snapshots, recording videos by enabling picture-in-picture, scanning documents, creating stop motion videos, comparing images by split-screen, or using the interactive whiteboard function.

WARNING:

This visualizer software ONLY works with the VIISAN document camera of a specific model. If you are using 3rd party products this software may NOT work.

System Requirements

To ensure the performance of your document camera, the following hardware system requirement is needed.

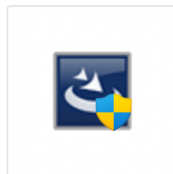
CPU	Intel® Core™ i5 or higher
RAM	8GB RAM minimum, 16GB RAM recommended.
GPU	Intel® Iris Plus Graphics series or higher
Hard Disk	The installation and operation of the program requires 1G disk space. You can scan more images if the disk space is bigger. The recommended storage is 20G.
Operating System	Windows 10 / Windows 11
USB	USB port

NOTE: The system requirements and compatibility can change over time, depending on the operating system and updates from Windows.

Installing the software


Visit to <https://www.viisan.com/en/download/index.html> website to download the VIISAN VisualCam software.

1. Double click the **VIISAN VisualCam.exe** file to install the software.




VIISAN
VisualCam_V7.3.
2_20220421

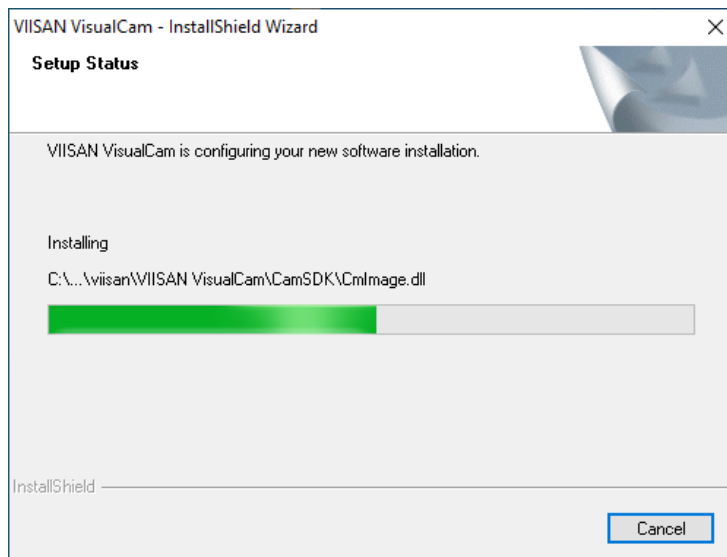2. Follow the onscreen instructions to complete the installation.




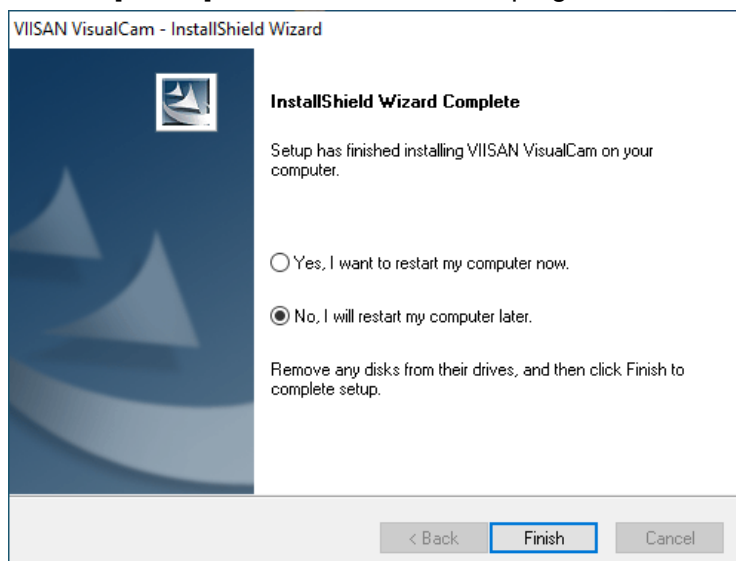 3. Click [**Finish**] to finish the installation program.




Uninstalling VIISAN VisualCam

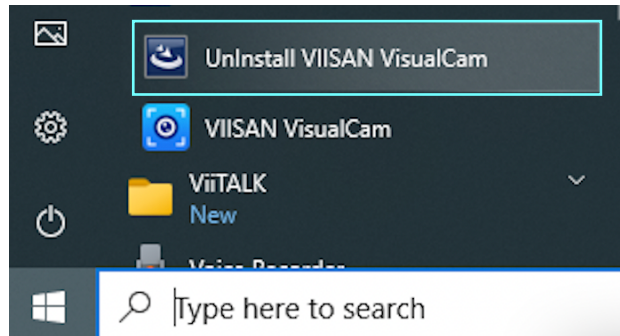 To remove VIISAN VisualCam from your Windows. Click the Windows Start Menu > All Programs > VIISAN VisualCam folder > UnInstall VIISAN VisualCam




Getting Started

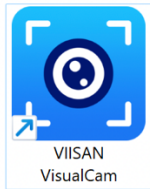
To start the program, please double click on the VIISAN VisualCam icon on the desktop or start VIISAN VisualCam from the Windows Programs list.



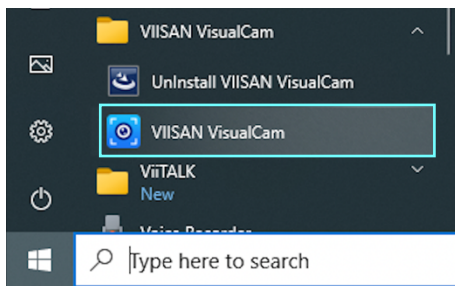Click the Windows Start Menu > All Programs > VIISAN VisualCam folder > **VIISAN VisualCam**.



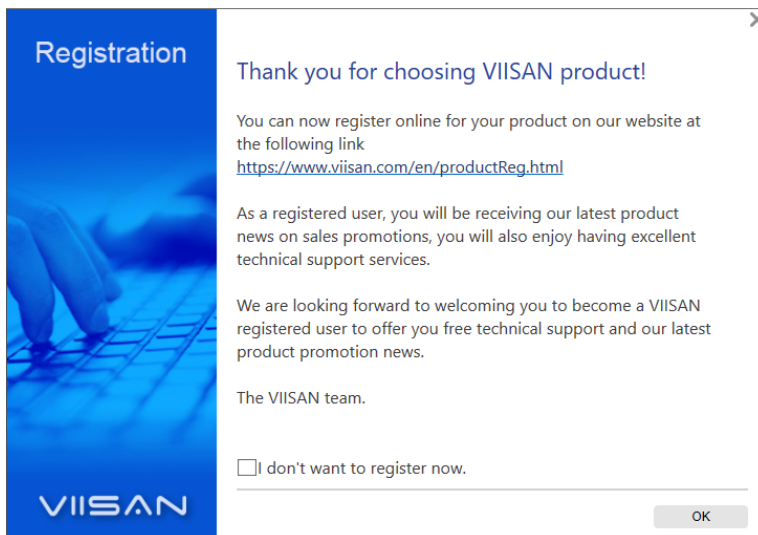 
When VIISAN VisualCam app is launched the first time, you should see a registration menu appears and you can click the URL <https://www.viisan.com/en/productReg.html> to register your product or click 'OK' to enter the app.




NOTE: If you don't want to see the registration window every time you launch the app, you can click below checkbox.

I don't want to register now.

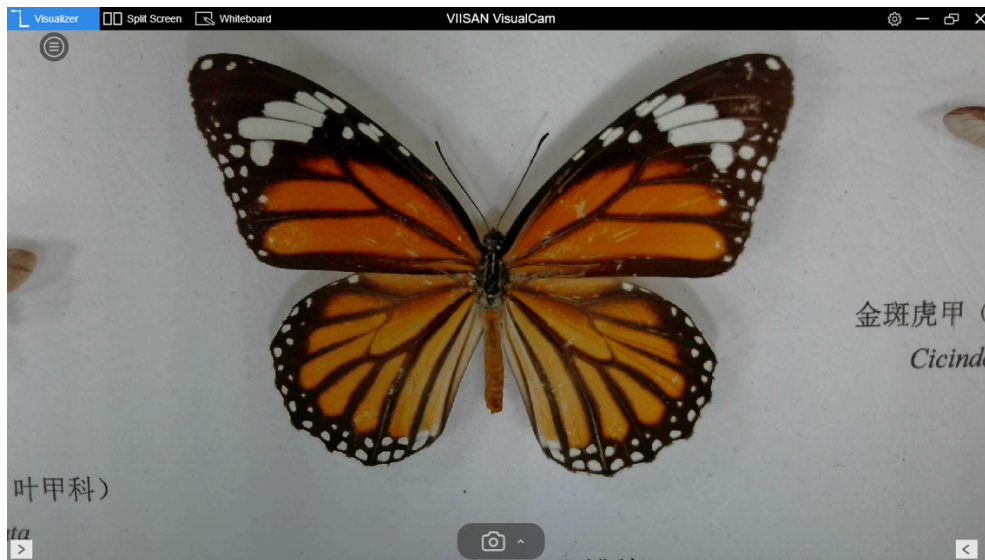When the document camera is connected to the desktop/laptop, it automatically goes to Visualizer live video mode.




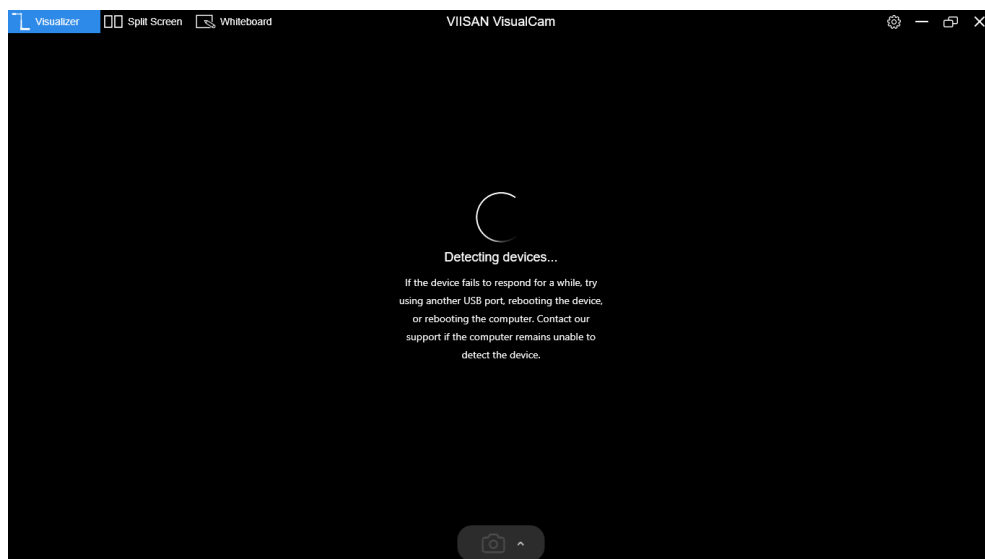 NOTE: If you don't see the real-time preview video from the camera device and a **[Detecting devices...]** message is displayed in the middle of the main window as below, please double check the following items sequentially.



- Check the USB connation

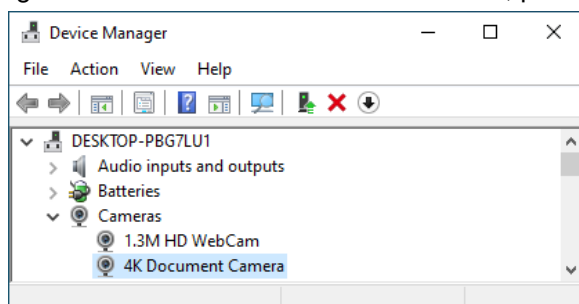 Ensure the Windows has recognized the device under the Cameras in the Windows Device Manager menu. If the device is not be detected, please try to contact with other USB port.



- For Windows 10 computer

Go to "Settings Privacy Camera" to check whether the permission is allowed

Allow apps to access your camera

If you allow access, you can choose which apps can access your camera by using the settings on this page. Denying access blocks apps from accessing your camera. It does not block Windows Hello.

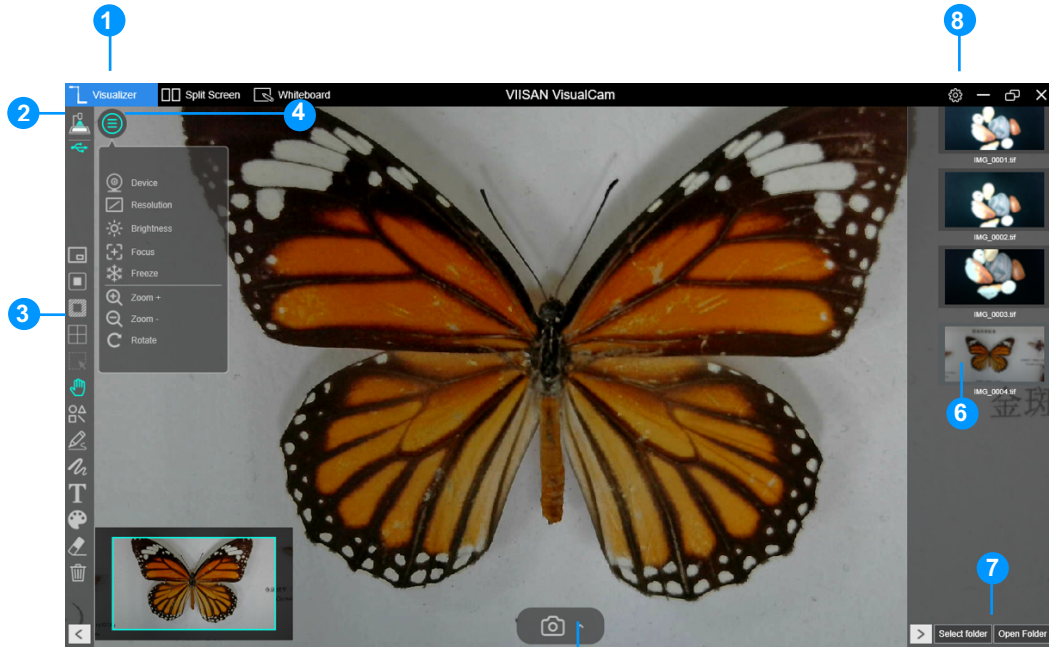 


- Disable Anti-Virus software

If you have installed anti-virus software, please manually add the VIISAN VisualCam client to the whitelist of the anti-virus software.


Operation Interface Description




The following is the description of the VisualCam software operation interface.



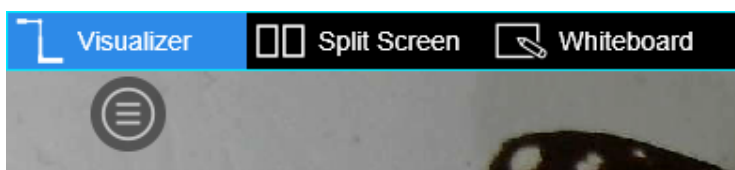1. Function Tabs


VIISAN VisualCam software integrates three major functions. You can switch each function by clicking on the tab.






Mode	Descriptions
 Visualizer	Showing the live video perceived by the document camera.
 Split Screen	With the Split-Screen, you can connect two document cameras on your computer and present them split-screen.
 Whiteboard	Allows you to draw and annotate anything on an interactive whiteboard.

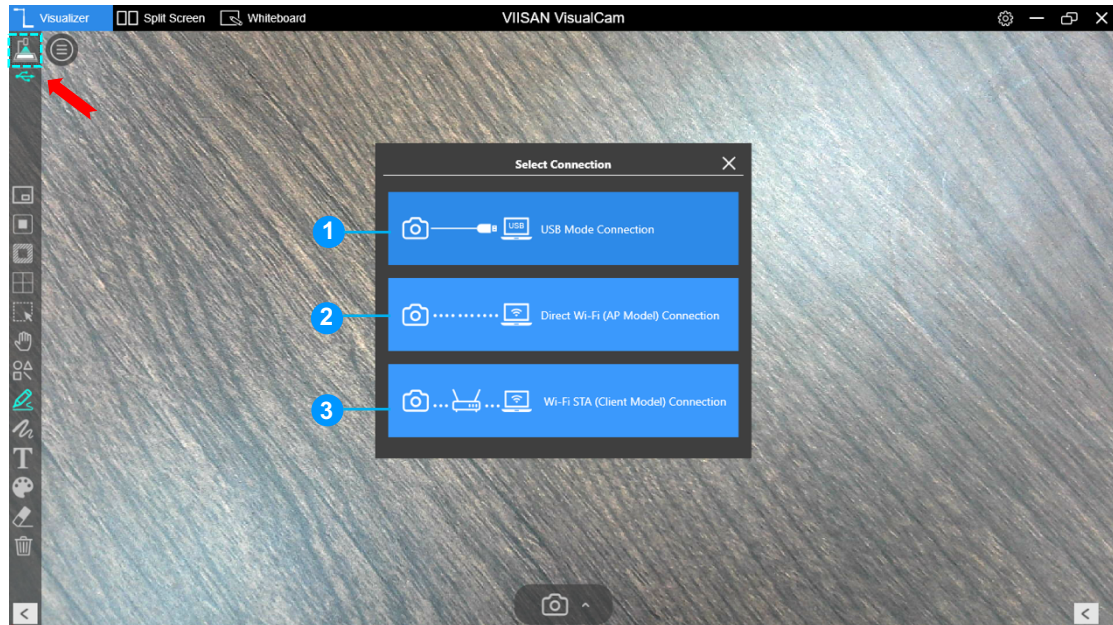 2. Select Connection


In the upper left corner, you can click the  icon to choose the device connection method.




























Item	Icon Status	Descriptions
1		USB mode connection. (Default) This mode allows you to connect the document camera by USB wired connection.
2		Wi-Fi p2p (AP Mode) connection. This mode allows you to connect the document camera directly without an internet connection., <i>NOTE: This connection only available for the Wi-Fi model.</i>
3		Wi-Fi STA (Client Mode) connection. This mode allows you to connect the document camera through a router. <i>NOTE: This connection only available for the Wi-Fi model.</i>

3. Left Toolbar


On the left side toolbar, there are many useful control tools available.


Icons	Descriptions
	Picture-in-Picture Enable picture-in-picture mode






	Mask Enable the mask mode in solid or translucent style
	Spotlight Show spotlight by using the rectangle or ellipse style
	Gridlines Show gridlines on screen
	Select Select the annotation or object on the screen
	Move Move the screen
	Shape Tool Add the shapes
	Rectangle Tool Draw a rectangle
	Draw a rectangle in solid style
	Ellipse Tool Draw an ellipse
	Draw an ellipse in solid style
	Triangle Tool Draw a triangle
	Draw a triangle in solid style
	Line Draw a line
	Dotted line Draw a dotted line
	Single arrow Draw a single arrow
	Double arrow Draw a double arrow
	Smooth Pen Draw and write by using the Smooth Pen
	Highlighter Pen Draw and write by using the Highlighter Pen
	Disappearing Pen Draw and write by using the Disappearing Pen <i>NOTE: It allows to set the disappearing time (3, 5, 10, 20 seconds)</i>
	Line Option Set the line thickness of annotation.

	Color Option Choose the color of annotation, shape, and text tools.
	Text Tool Add the texts
	Eraser Erase annotation on the screen
	Clear All Clear all annotations on the screen
	Show/Hide Show and hide toolbar

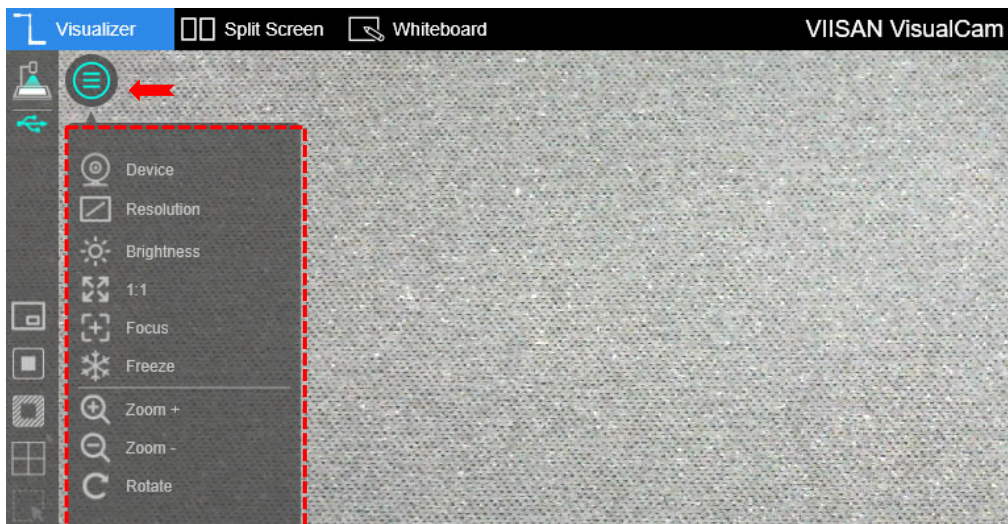 4. Image Adjustment Menu


Click on the  icon to expand the image adjustment menu, you can use the following tool to adjust the live video on the preview window.




Icons	Descriptions
	Select the device and switch power frequency (50/60Hz)
	Set the resolution
	Adjust brightness
	Turn on/off the lamp in 3-level (Level 1, Level 2, Level 3) NOTE: This Function only available on specific model
	Show 1:1 image / Fit Screen

	Auto Focus Adjust the best focal length.
	Freeze video
	Zoom in image
	Zoom out image
	Rotate image by 0°, 90°, 180°, 270°, Flip or Mirror

5. Capture Button Settings

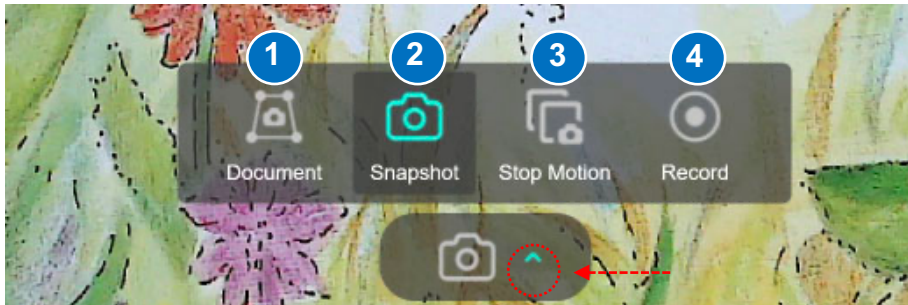 
Click on the up-arrow  icon at the middle lower button to switch the capture mode.



Mode	Descriptions
1	Scan document with cropping out of background
2	Take snapshot (Default selection)
3	Create stop motion video
4	Record video

6. Thumbnail List

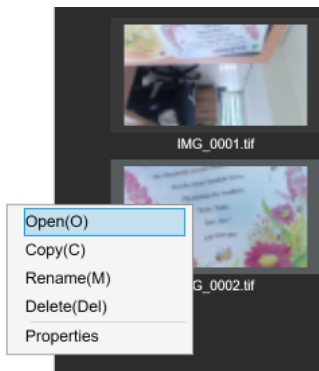 
Right click on a thumbnail on the right-side output listing of the main window, you will see the following options.



Right Click Options	Explanations
Open	Open file
Copy	Duplicate file
Rename	Rename of file
Delete	Delete a file
Properties	Show file information

7. File Save Path Settings

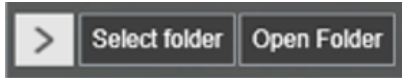
On the bottom right of the main window, there are options for setting the directory for saving files:



Button	Explanations
Select Folder	Select file save destination
Open Folder	Open the file location

8. Settings menu

General Settings:

Click the  icon on the upper right corner to entry to the settings page.



General Settings:

The screenshot shows the 'General' settings tab. It includes a dropdown for 'Interface Language' (English(English)), a text field for 'File Saving Location' (C:\Users\nicky\AppData\Local\Temp\VIISAN VisualCam\UserFiles) with a 'Select folder' button, a checked checkbox for 'Enable PTZ View', and a table for 'Device Connection Status'. At the bottom, there are 'Default' and 'Exit' buttons. Numbered callouts point to these elements: 1 (Language dropdown), 2 (File Saving Location field), 3 (Enable PTZ View checkbox), 4 (Device Connection Status table), 5 (Default button), and 6 (Exit button).

1	Switch interface language
2	Set the file saving location
3	Enable PTZ view NOTE: The PTZ view only appears when zooming in on the video.
4	Display the current device connection status
5	Restore to default value
6	Exit the settings page


Snapshot Settings:

1	Set the image file output format (JPG, BMP, PNG, TIF)
2	Set the file name for format by serial number or by date & time
3	Set the prefix of file name

Record Settings:


1	Set the video file output format (AVI, MP4, FLV)
2	Set the video compression quality <ul style="list-style-type: none"> • Standard Compression • Low Compression Rate (High image quality, bigger size) • High Compression Rate (Low image quality, smaller size)
3	Enable microphone
4	Select microphone
5	Set the file name for format by serial number or by date & time
6	Set the prefix of file name

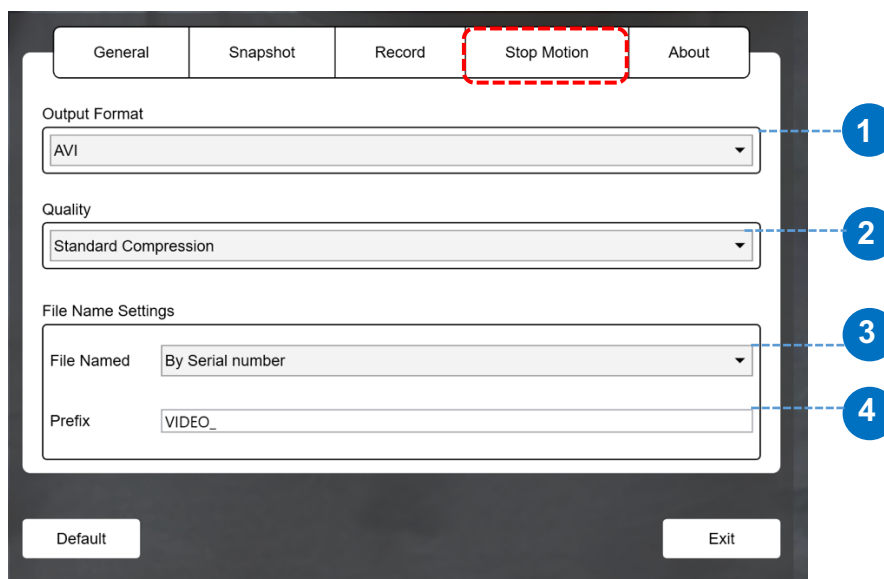 Stop Motion Settings:



1	Set the video file output format (AVI, MP4, FLV)
2	Set the video compression quality <ul style="list-style-type: none"> Standard Compression Low Compression Rate (High image quality, bigger size) High Compression Rate (Low image quality, smaller size)
3	Set the file name for format by serial number or by date & time
4	Set the prefix of file name

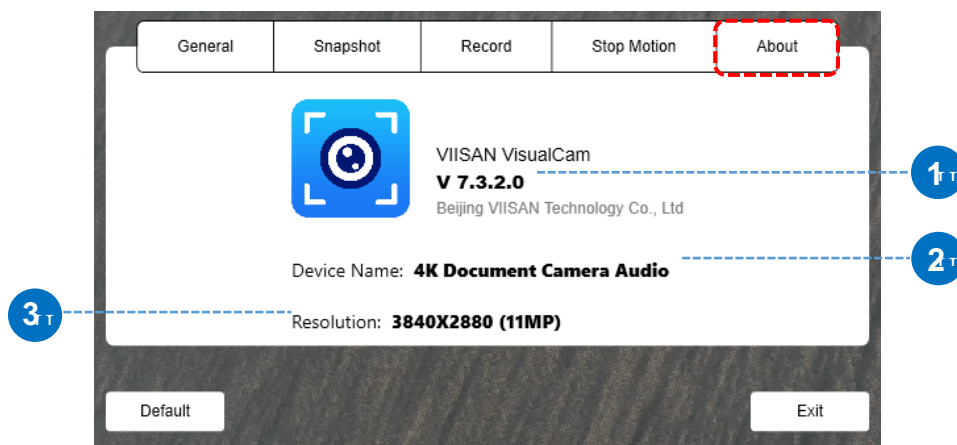 
About page:





1	Display software version
2	Display current connected device name
3	Display device resolution

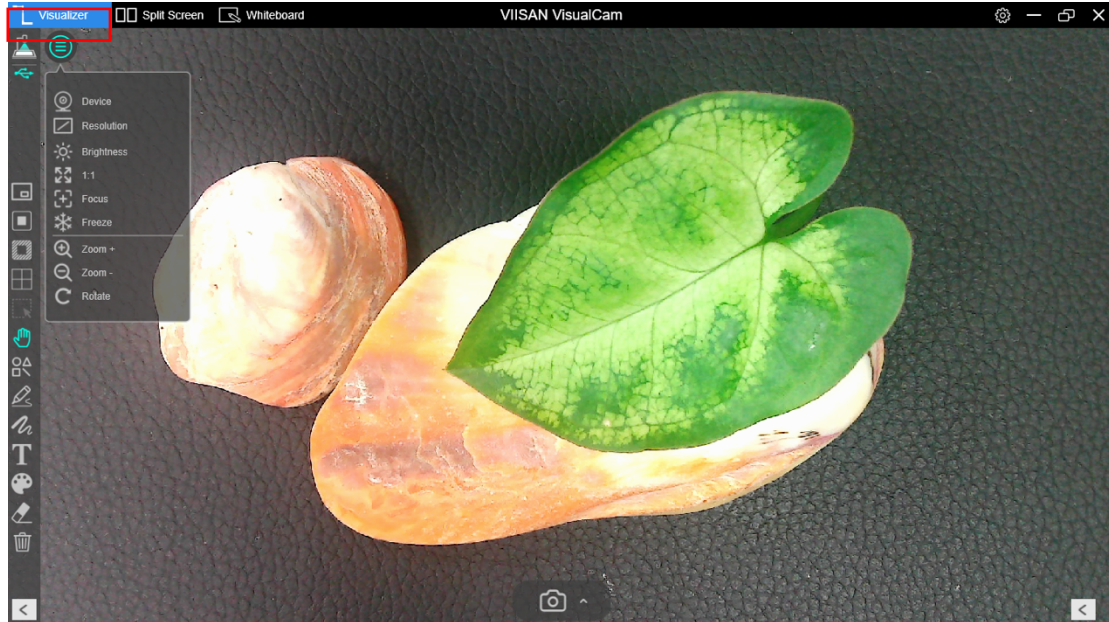


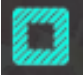


Visualizer Mode Description

The visualizer mode allows presenting the live view by the document camera. There are many useful functions available listed on the left toolbar. All of them can enhance your presentation!



Left-side toolbar function

Icons	Descriptions
	<p>Picture-in-Picture</p> <p>Click on the PIP icon at the left-side toolbar to enable picture-in-picture mode, you can move the sub-screen window location or resize of the frame.</p>  <p>NOTE: This function only available on a built-in webcam laptop/desktop.</p>

	<p>Mask Click on Mask to enable the mask mode in black (Opaque) or translucent style, you can drag the cursor to enlarge or shrink the Mask area to the desired size.</p> <div style="display: flex; justify-content: space-around;"> <div style="text-align: center;">  <p> Black (Opaque) style.</p> </div> <div style="text-align: center;">  <p> Translucent style</p> </div> </div>
	<p>Spotlight Enable spotlight in rectangle or ellipse style, you can adjust the size and change the spotlight in black (Opaque) or translucent style.</p> <div style="display: flex; justify-content: space-around;"> <div style="text-align: center;">  <p> Ellipse style</p> </div> <div style="text-align: center;">  <p> Rectangle style</p> </div> </div>
	<p>Gridlines Show gridlines on screen</p>
	<p>Select Select the annotation or object on the screen</p>
	<p>Move Move the screen</p>
	<p>Shape Tool Add the shapes</p> 











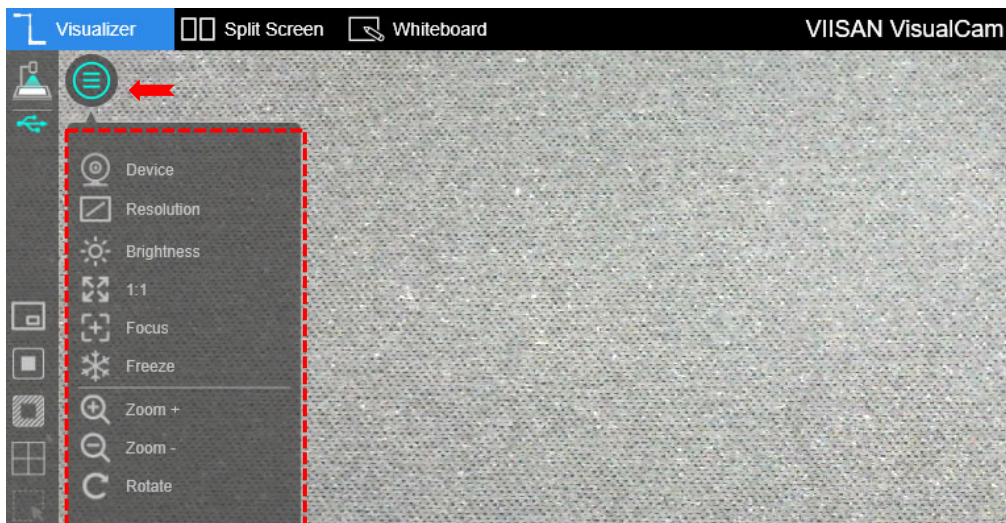 

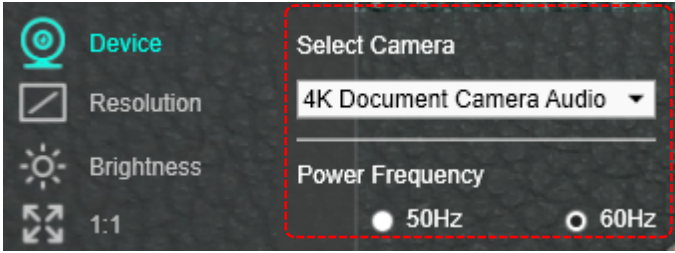











	Smooth Pen Draw and write by using the Smooth Pen
	Highlighter Pen Draw and write by using the Highlighter Pen
	Disappearing Pen Draw and write by using the Disappearing Pen <i>NOTE: It allows to set the disappearing time (3, 5, 10, 20 seconds)</i>
	Line Option Set the line thickness of annotation.
	Color Option Choose the color of annotation, shape, and text tools.
	Text Tool Add the texts
	Eraser Erase annotation on the screen
	Clear All Clear all annotations on the screen
	Show/Hide Show and hide toolbar


Image Adjustment Menu


Click on the  icon to expand the image adjustment menu, you can use the following tool to adjust the live video on the preview window.



Icons	Descriptions
	Device Select the device and switch power frequency (50/60Hz) 
	Resolution Set the resolution
	Brightness Adjust brightness
	Lamp Turn on/off the lamp in 3-level (Level 1, Level 2, Level 3) NOTE: This Function only available on specific model
	Display 1:1 image / Fit Screen
	Auto Focus Click once to autofocus
	Freeze video  Click to freeze the video /  Click again to unfreeze the video
	Zoom in image
	Zoom out image
	Rotate image by 0°, 90°, 180°, 270°, Flip or Mirror

Select Capture Mode

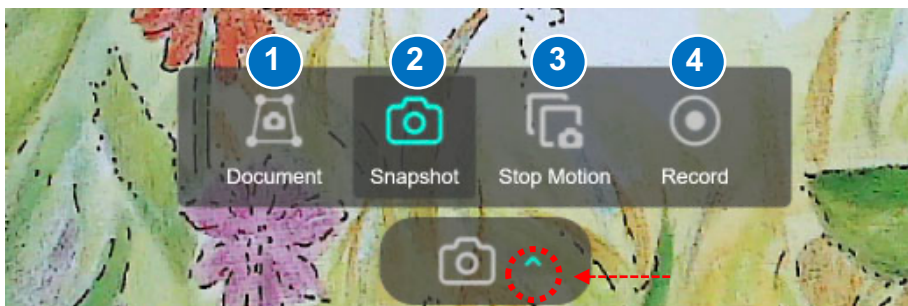 
Click on the up-arrow  icon at the middle lower button to switch the capture mode.



Mode	Descriptions
------	--------------


1

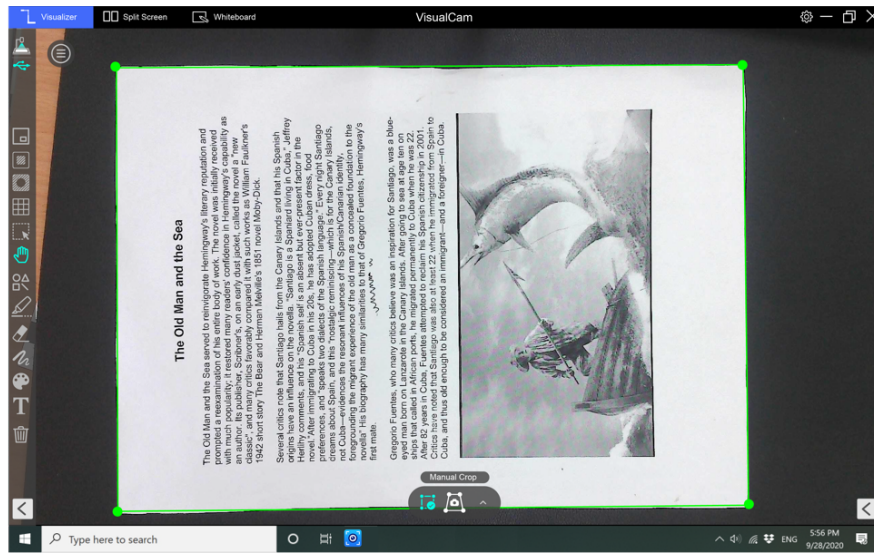 Scan document with cropping out of background




2

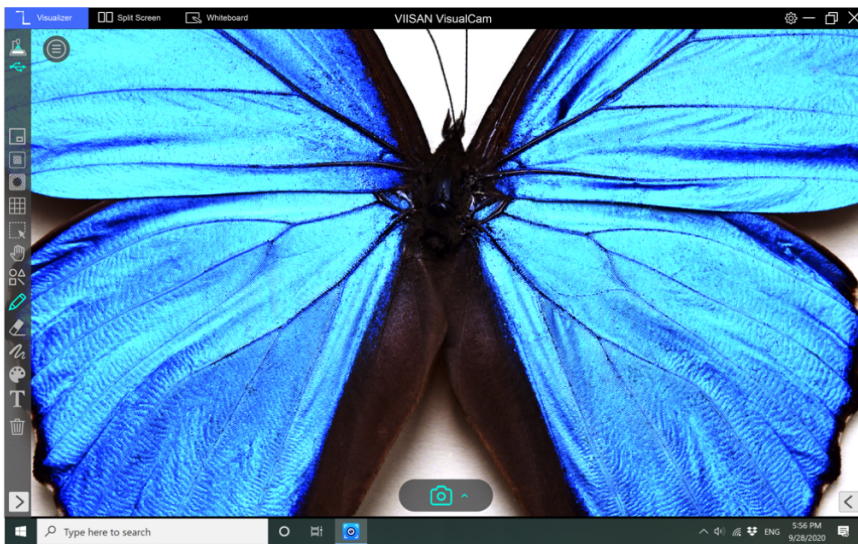Take a snapshot and save them in JPG, BMP, PNG, or TIF format (Default selection)




Create a cool and fun stop-motion video by taking pictures with a freeze-frame.

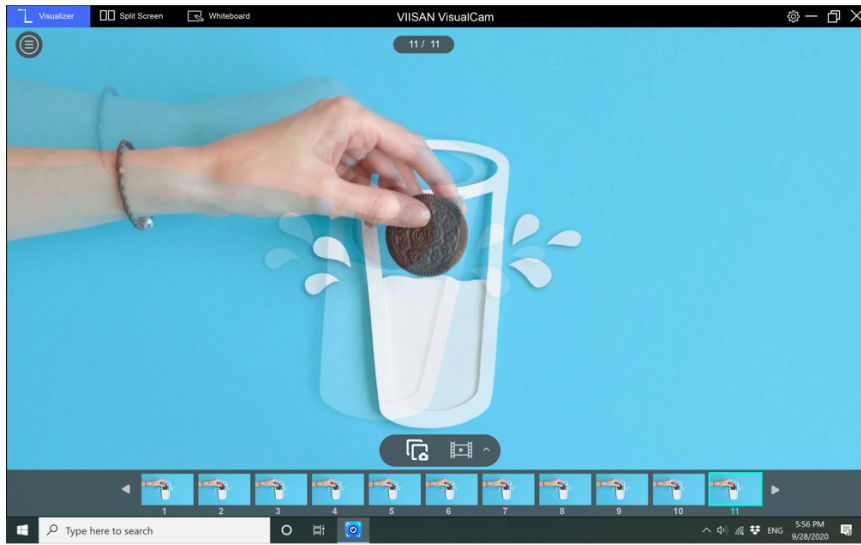 3



Record high-quality video in MP4, AVI, or FLV format.

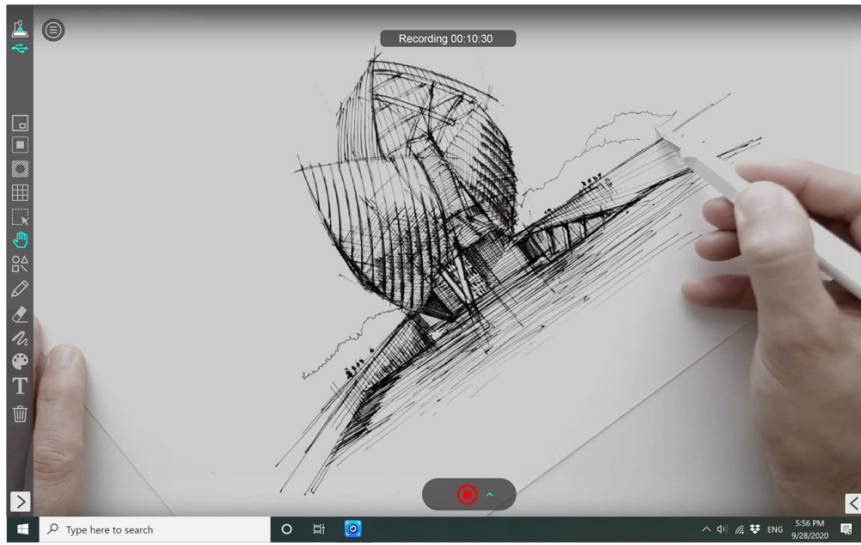 4




Click once to start recoding



Click again to stop recoding

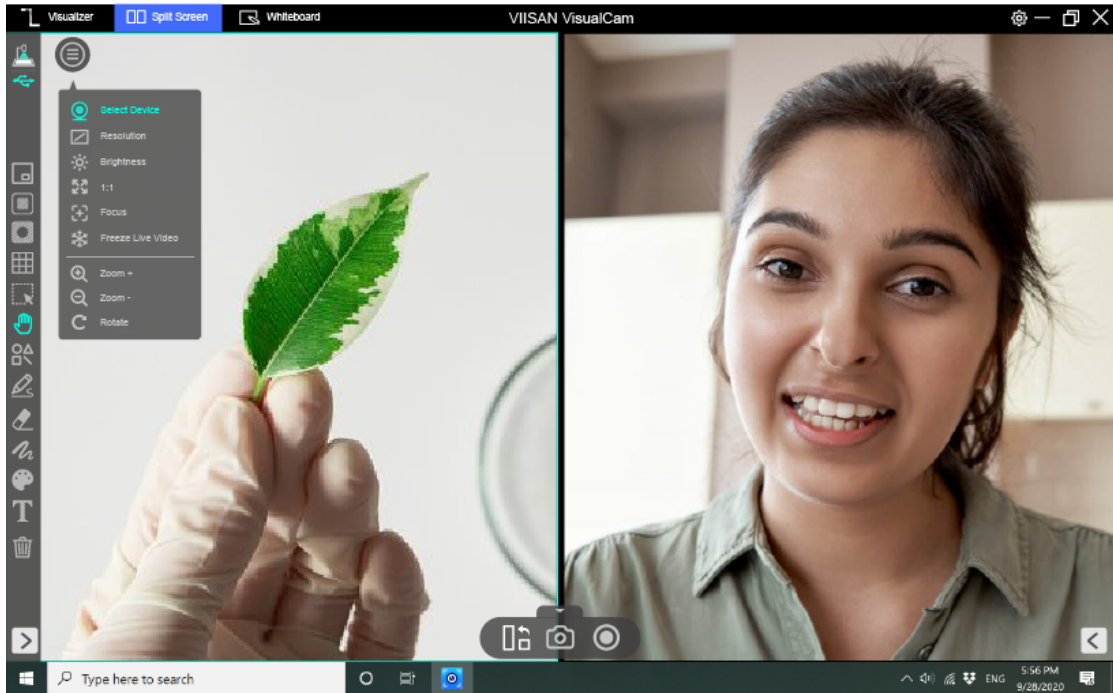
Split-Screen Mode Description




With the Split-Screen function, you can connect two document cameras to your computer and present them by splitting two live screens and you can even compare still image with live video.



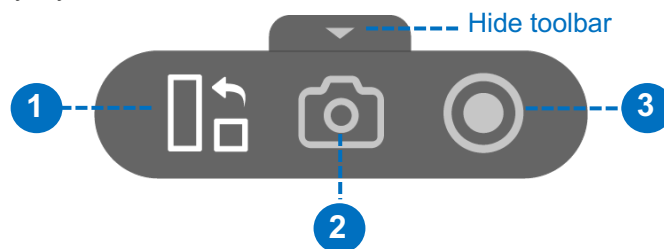
The action buttons of split-screen mode


The split-screen provides three action buttons for taking screenshots, recording screens, and changing the display layout.




item	icon	Descriptions
1		Shuffle Change the display layout
2		Screen Capture Take the screenshot of split-screen
3		Screen Recording Take the screen recording of split-screen

Compare with two live screens

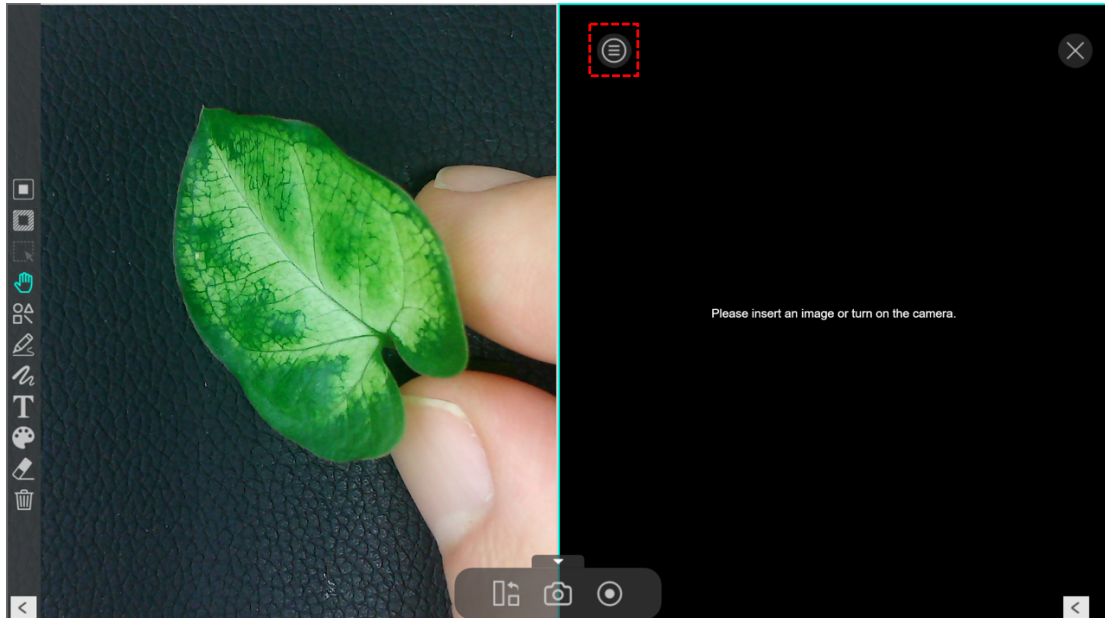To compare with two live screens, please click the  icon on the right-side window to expand the image adjustment menu then select the “Device” option.



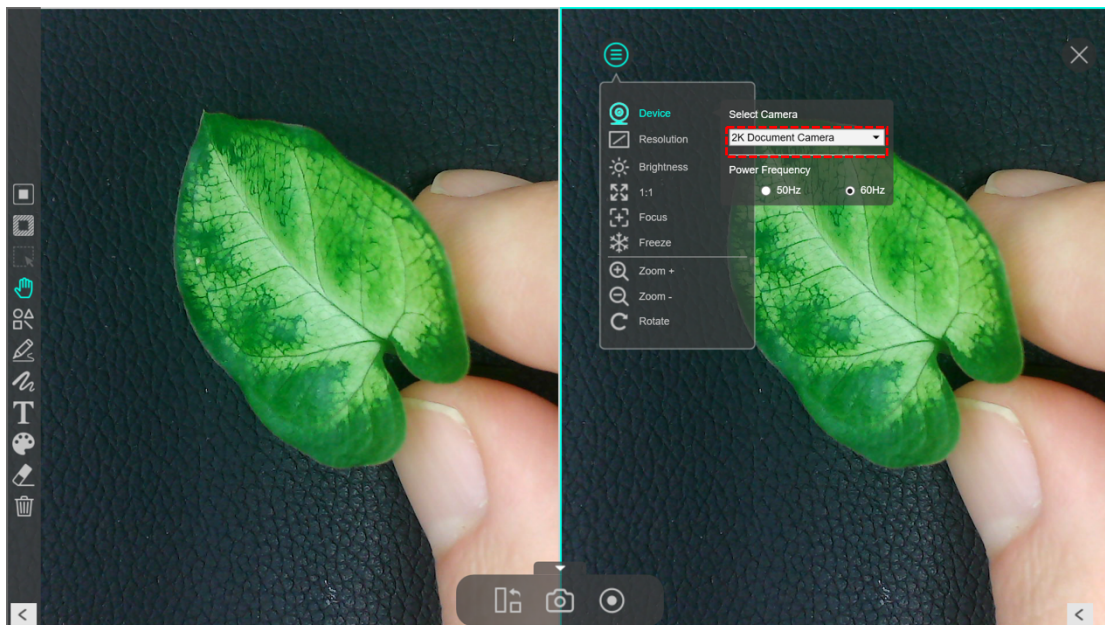
Select camera source to your document camera, in this function you can freeze the one-side video and keep the other side in live status.




You can also connect 2nd document camera to your computer one camera facing your face, another camera facing down to your demo object.


Compare images

Split screen mode allows you to compare multiple images on one screen.

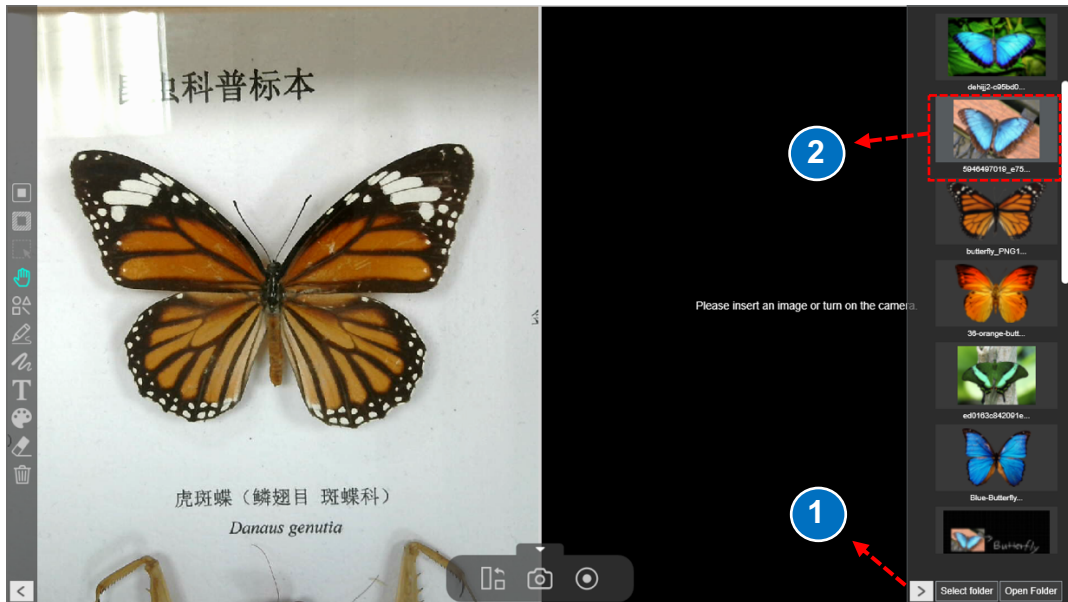 1. Click on the bottom right  icon to expand file output list.
2. Drag an image from the output list and insert it into the compare window.




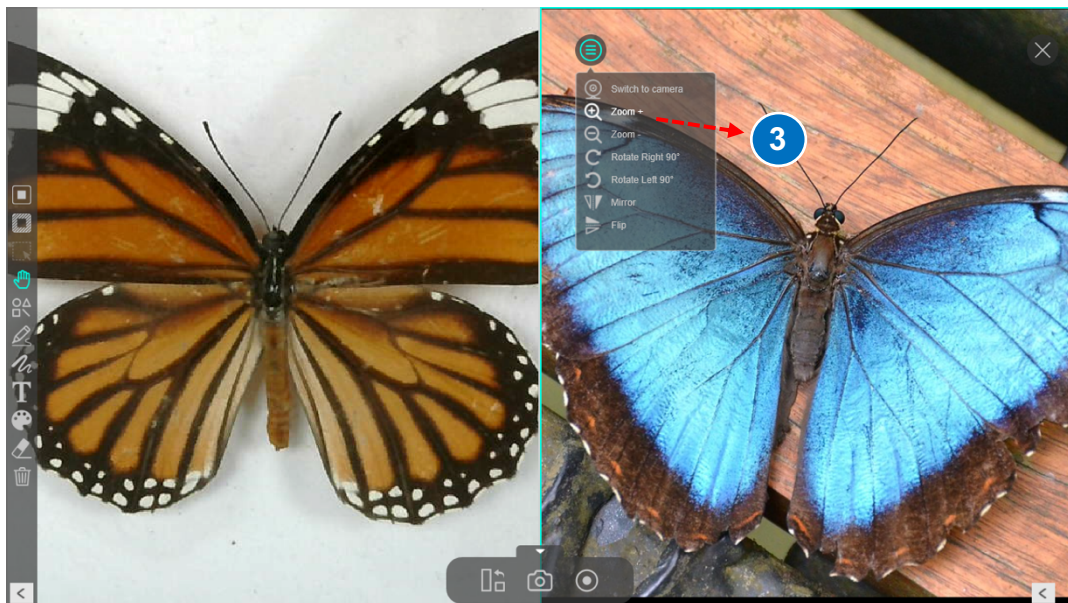 
3. You can zoom in/out or rotate the image for the best view.




NOTE: The maximum split-screen can only compare with 4 images.

Change the display layout

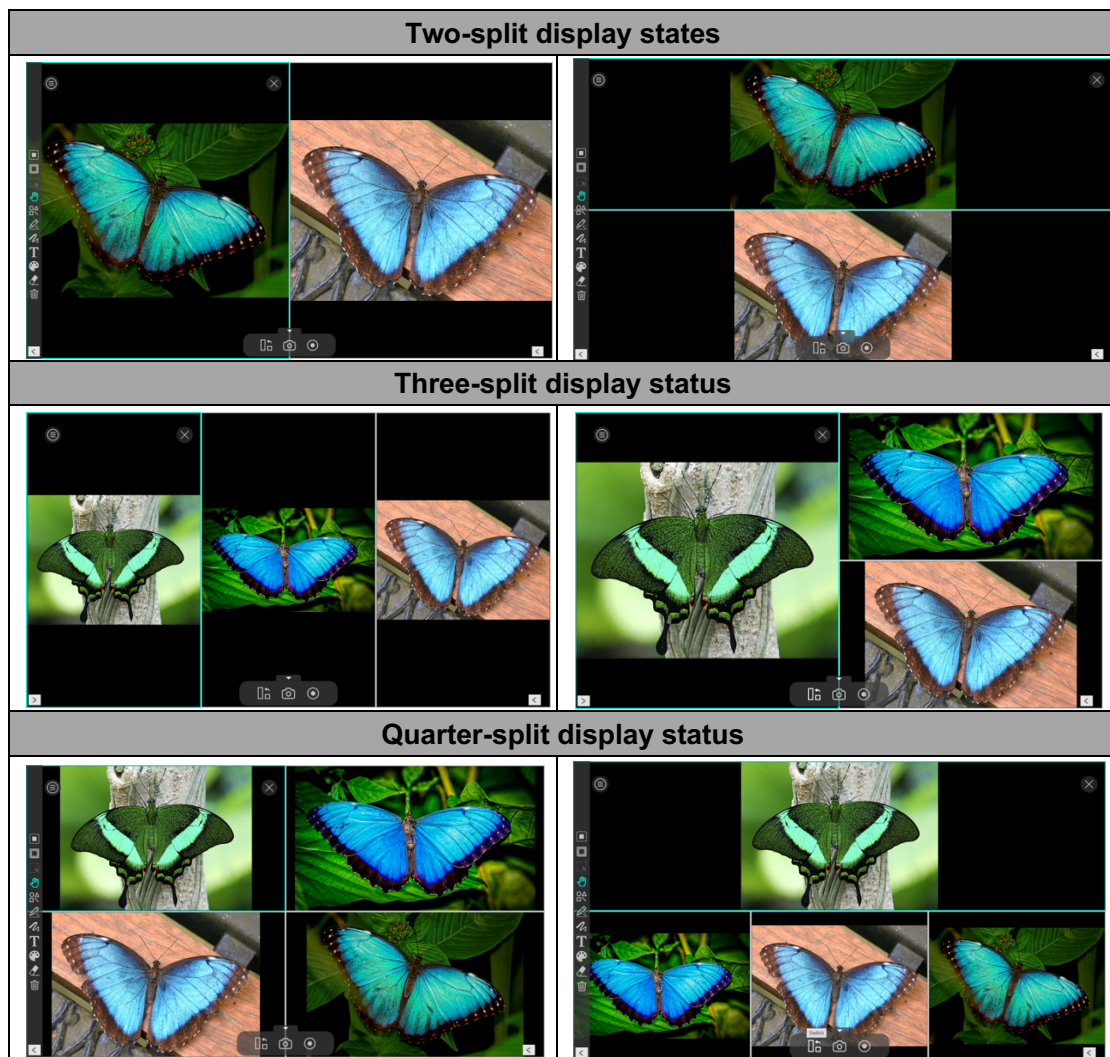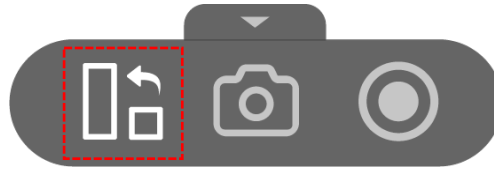 
The split-screen allows you to change the display layout by clicking of the shuffle button.



NOTE: If you want to remove one of the split windows, you can direct click on the  icon at the top right corner of each split window.


Whiteboard Mode Description

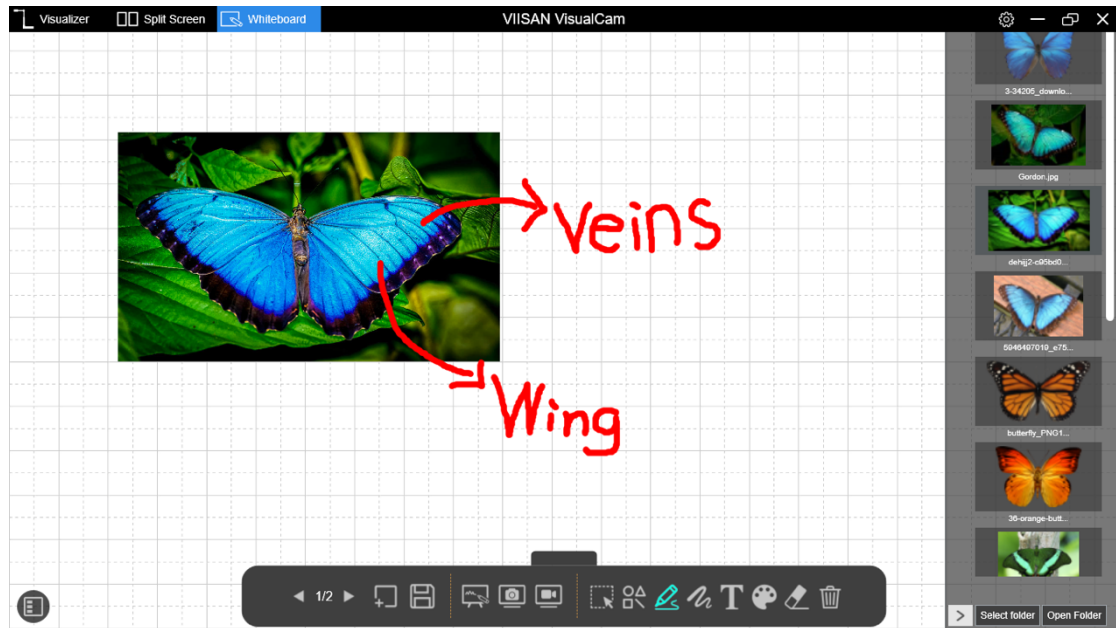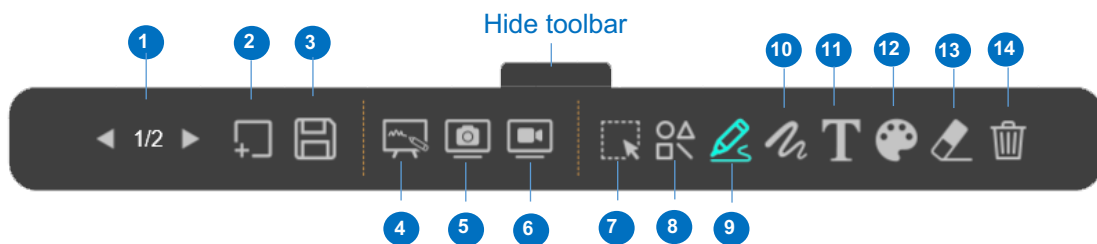 The whiteboard mode allows you to draw and annotate anything on the interactive whiteboard, in this whiteboard function you can drag and drop selected images from the right-side file list to the whiteboard and add annotations to increase your class interactivity.










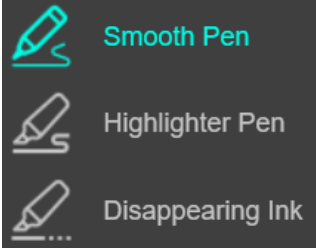







Whiteboard Toolbar Description

Whiteboard mode gives you a multi-page plane with all the drawing tools you need.




Item	Icons	Descriptions
1		Page up and down Switch your whiteboard page.
2		Add a page Add a whiteboard page with a different color background.
3		Save Save your current whiteboard pages in a PDF file.


4		<p>Switch the background</p> <p>In this option, you can switch the whiteboard background to the computer desktop or switch to mouse mode.</p> 
5		<p>Screenshot</p> <p>In the screenshot option, you can choose to take a full screenshot or select to capture with an area.</p> 
6		<p>Screen recording</p> <p>Record your whiteboard screen.</p>
7		<p>Select</p> <p>Select the annotation or object on the whiteboard.</p>
8		<p>Shape Tool</p> <p>Add the shapes.</p> 
9		<p>Freehand Tool</p> <p>In the freehand tool option, you can select a brush style to draw and write on the whiteboard.</p> 
10		<p>Line Option</p> <p>Set the line thickness of annotation.</p>
11		<p>Text Tool</p> <p>Add the texts.</p>
12		<p>Color Option</p> <p>Choose the color of annotation, shape, and text tools.</p>
13		<p>Eraser</p> <p>Erase annotation on the screen</p>
14		<p>Clear All</p> <p>Clear all annotations on the screen.</p>


Add an image to the whiteboard

The whiteboard mode allows you to inset the images into the whiteboard.

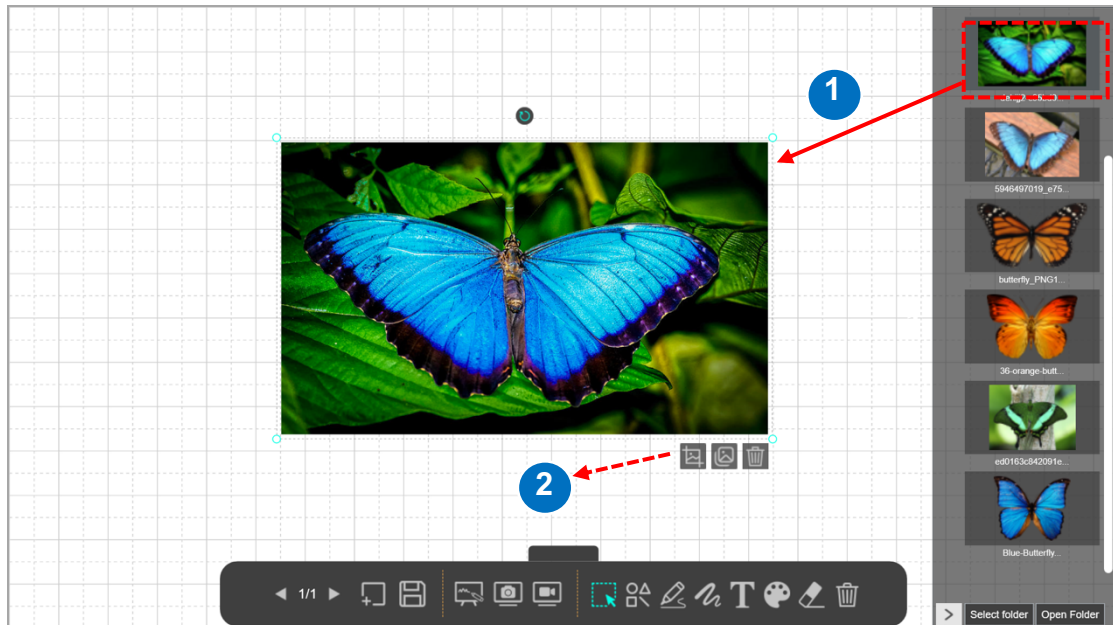 
1. Drag an image from the output list and insert it into the whiteboard.
2. You can crop, duplicate, or remove the image by using editing tools.




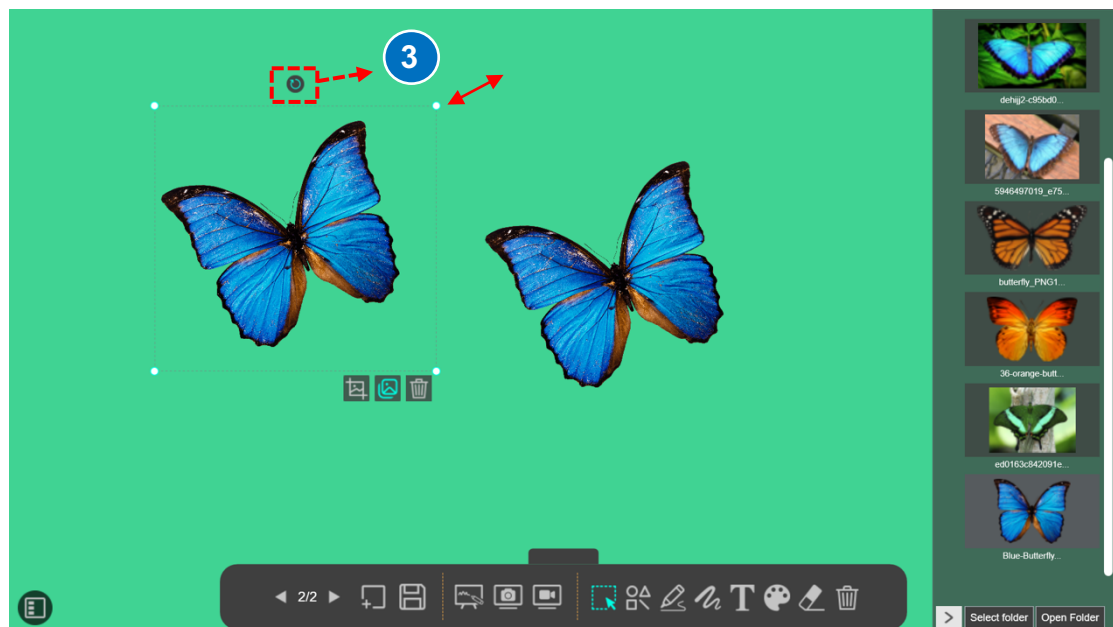 
3. You also can place and hold the  icon to rotate the image or click the cursor to adjust the size




Add a whiteboard page

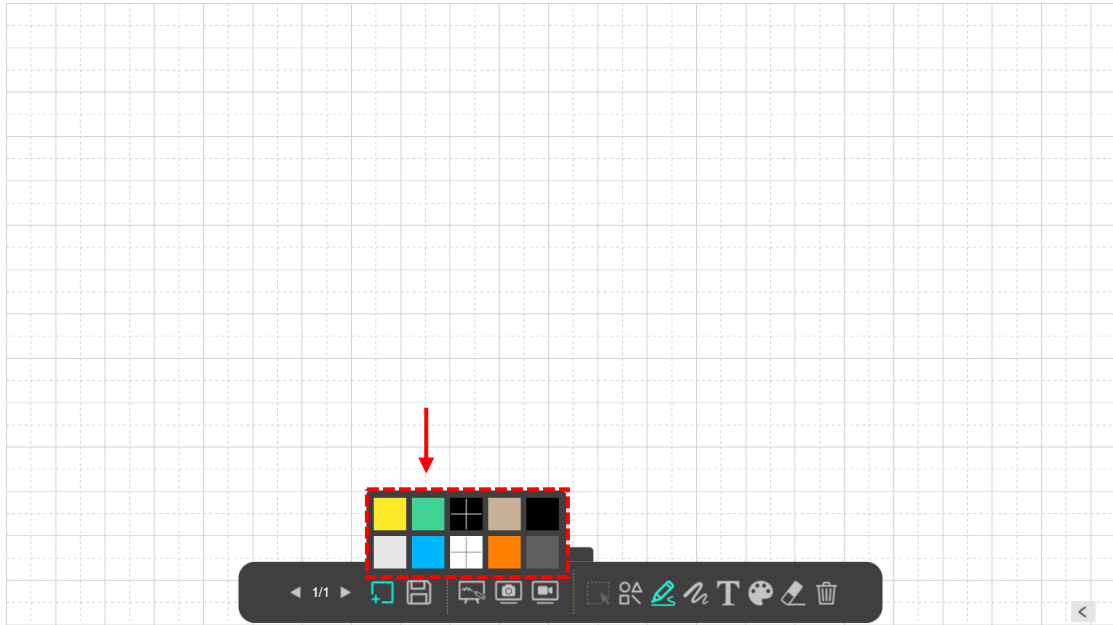To add a whiteboard page, please click on the  icon and choose a background color.



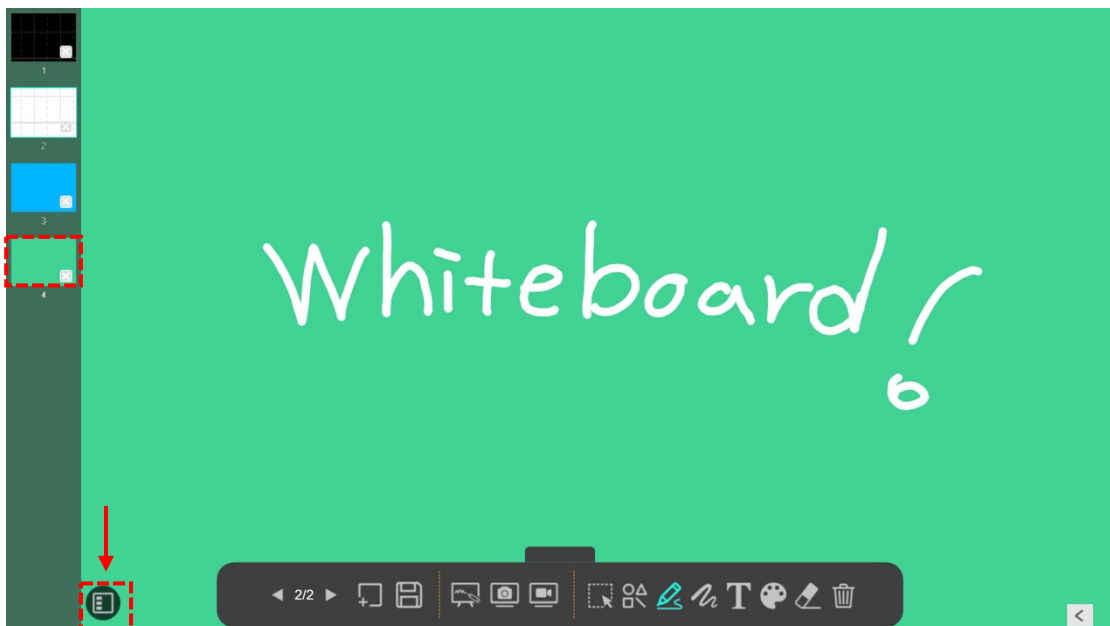You can also click the  icon to expand the thumbnail navigation bar.



Troubleshooting

If the device cannot be detected for a long time, you can try the following.

- Make sure you are using a support model camera device.

If you are using a 3rd party document camera some of functions in this software may NOT work.

- Change the USB port

if the camera scanner is connected with other USB devices at the same time, you can disconnect other USB devices, and then restart the scanner and try again.

- Check if the camera is opened by other applications

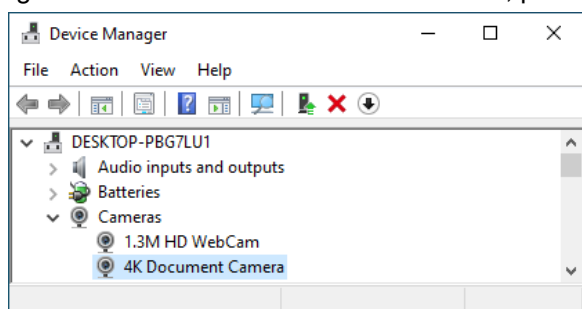
Check the macOS program, if the camera has been occupied by other applications, please exit the application and try again.

- Turn off the virtual machine

If your mac has installed Windows virtual machine such as “Parallels Desktop”, please turn off it and connect the device again.

- Check the USB connation

Ensure the Windows has recognized the device under the Cameras in the Windows Device Manager menu. If the device is not be detected, please try to contact with other USB port.



- For Windows 10 / 11 computer

Go to "Settings Privacy Camera" to check whether the permission is allowed

Allow apps to access your camera

If you allow access, you can choose which apps can access your camera by using the settings on this page. Denying access blocks apps from accessing your camera. It does not block Windows Hello.

